 




Dell Inspiron 530 RAM Replacement

Removing RAM

Written By: faisal

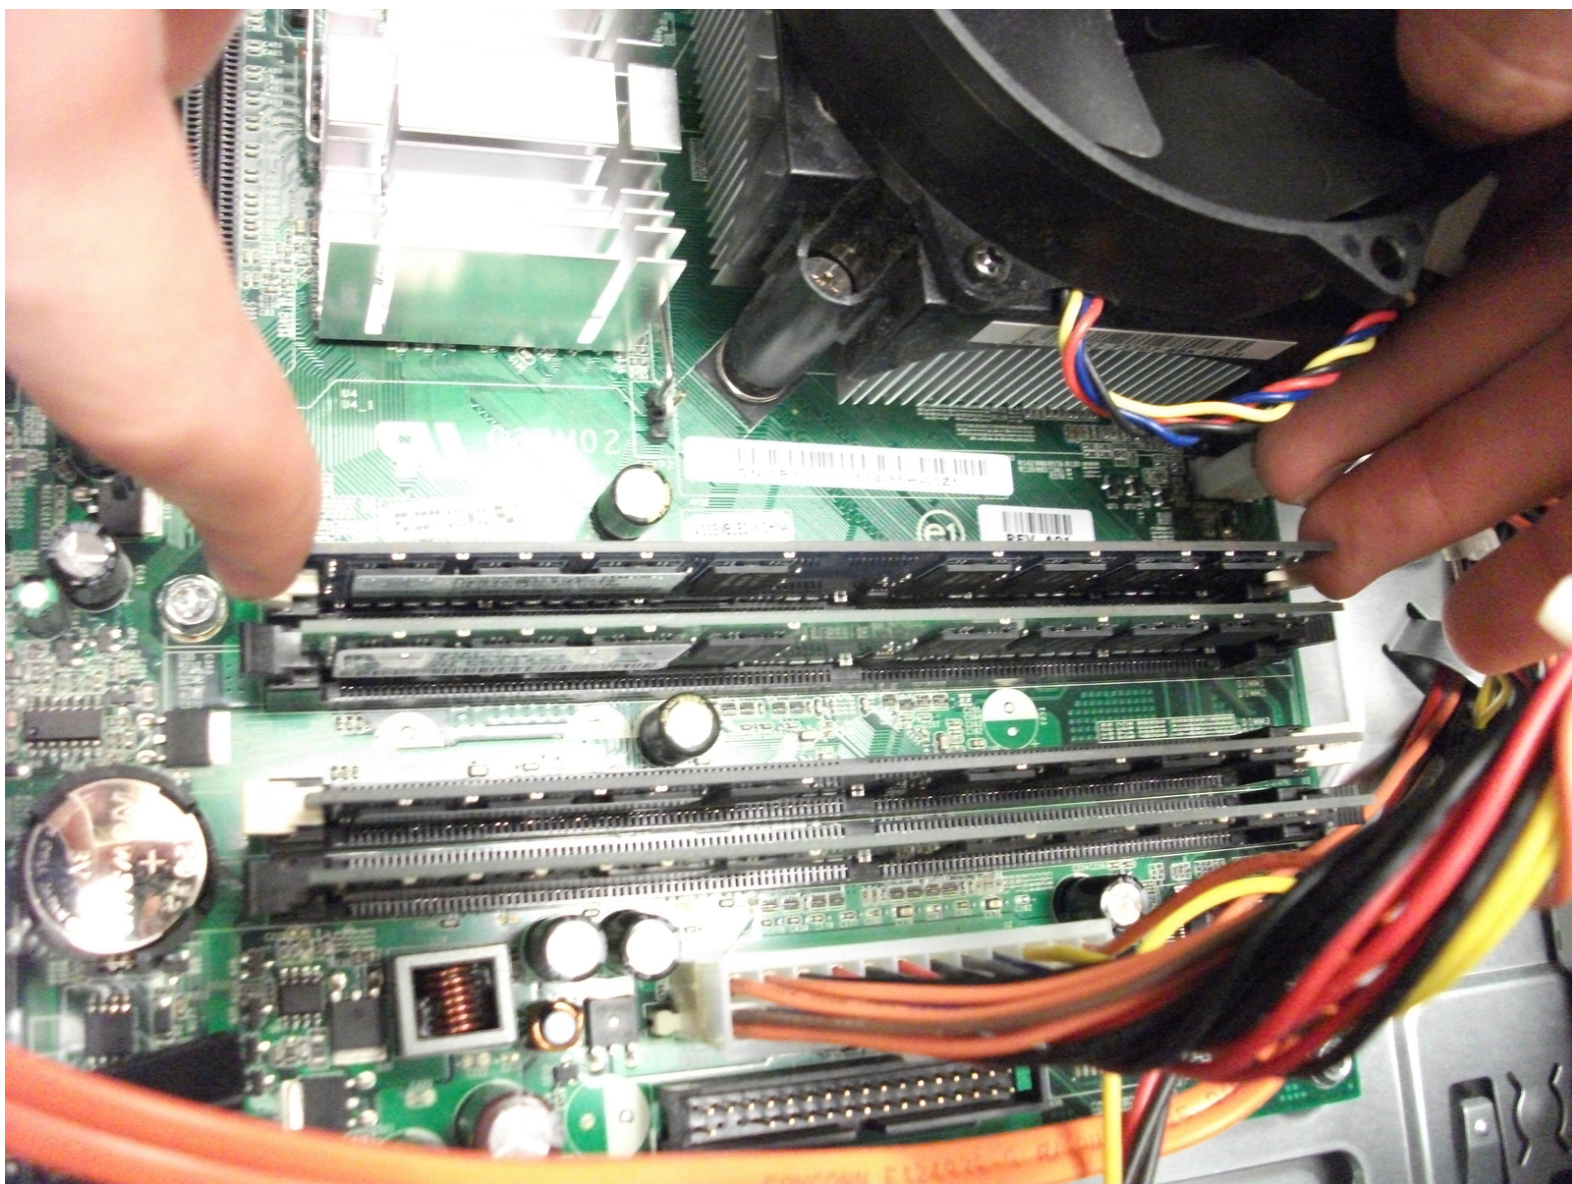

INTRODUCTION

This guide will demonstrate removing the computer's RAM.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Case



- Place the case on its side.
- Locate and remove the two 13.1 mm thumbscrews.

Step 2



 
- Slide the side panel towards the back and remove.

Step 3 — RAM



- Locate the four sticks of RAM.

Step 4

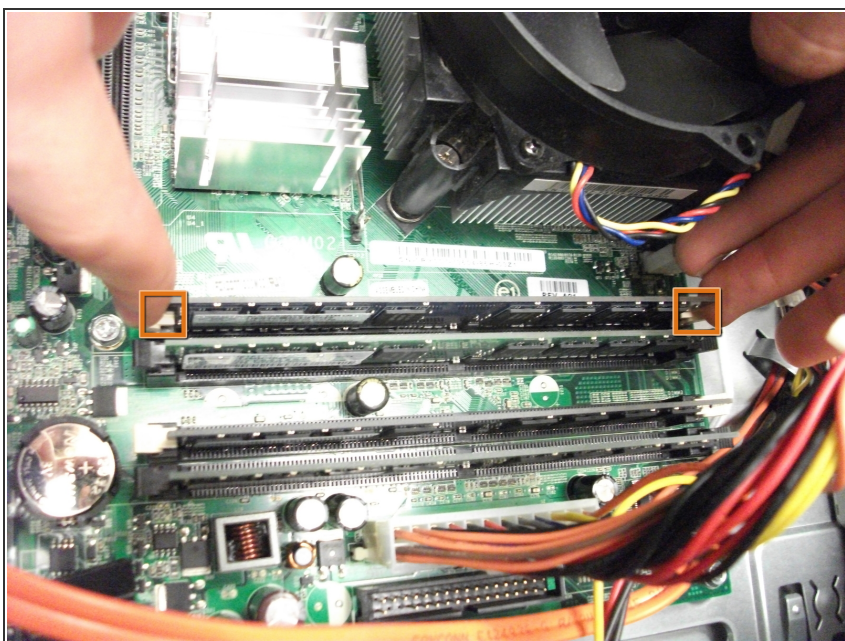

- Locate the two plastic tabs on the ends of a RAM stick.
- Press down on the two tabs together until RAM stick is ejected.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 06:06:57 AM.